



AUBURN-CORD-DUESENBERG CLUB

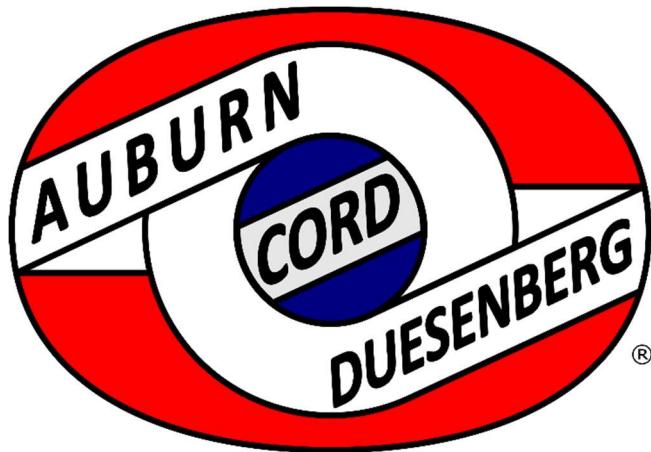

CORD

Model 810—Model 812

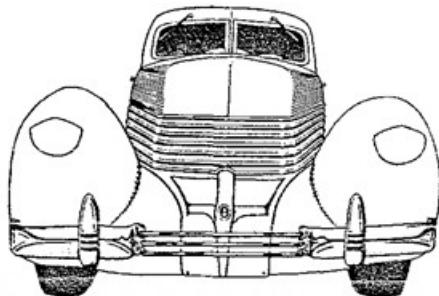

TRANSMISSION MANUAL

By A. S. Ayers
Updated by Jim O'Brien

FOR THOSE WHO HAVE NEVER RELISHED THE COMMONPLACE

NOTICE

The Auburn-Cord-Duesenberg Club, Inc., does not necessarily approve nor endorse the information contained in this book. Efforts have been made to confirm accuracy. However, the decision to use the methods and information described in this book is the sole responsibility of the reader.

AUBURN-CORD-DUESENBERG CLUB, Inc.

CORD

Model 810 — Model 812

TRANSMISSION MANUAL

by A.S. Ayers

Updated by Jim O'Brien

**First Printing 1985
Updated 2020**

TABLE OF CONTENTS

Introductions

Transmission Manual Update.....	1
Transmission Manual Preface.....	2
Dr. Flywheel's Comments on Cord Transmissions.....	3
History.....	4

Section

I. Removal of transmission from car.....	5
II. Transmission disassembly and inspection.....	8
III. Heavy splined thrust washer modification.....	10
IV. Mainshaft sleeve rebuilding	11
V. Fitting components in upper cluster assembly	14
VI. Modification of case for clutch interlock.....	16
VII. Assembly of upper cluster/mainshaft sleeve	17
VIII. Assembly instructions.....	18
IX. Installation of transmission in car	22

ILLUSTRATIONS

Figure Subject

1. Damaged low / reverse slider gear.....	25
2. Broken lower cluster gears.....	25
3. Broken and worn low / reverse cluster gears.....	26
4. Chewed-up transmission oil pump gears	26
5. Chewed-up second / third syncronizer hub.	27
6. Worn shift fork	27
7. Worn second drive gear after salvage by heli-arcing synchronizer ring back on	28
8. Upper cluster parts ready for assembly	28
9. Mainshaft sleeve with fourth thrust washer ready for fourth synchronizer.....	29
10. Mainshaft sleeve with fourth synchronizer ready for forth gear	29
11. Mainshaft sleeve with fourth drive gear and synchronizer.....	30
12. Mainshaft sleeve with fourth gear, fourth gear synchronizer and third gear	31
13. Mainshaft sleeve with third and fourth drive gears and second / third and fourth synchronizers and thrust washers	32
14. Mainshaft sleeve with second, third and fourth drive gears and second / third and fourth synchronizers.....	32
15. Fully assembled upper cluster gear assembly	33
16. Second / third synchronizer hub with detent balls and springs	33
17. Mainshaft sleeve (without gears or synchronizers) showing thrust washers in correct locations with oil grooves	34
18. Second synchronizer in lathe ready for cutting taper on synchronizer clutch ring	34
19. Fit of synchronizer cone into synchronizer clutch ring.....	35
20. Indicating center of third gear on lathe for boring out bushing.....	35
21. "Dummy shift rails" for holding detent balls in place during assembly	36

APPENDICES

A. Exploded Diagram of Transmission	37
B. Parts List for Transmission.....	38
C. Wiring Diagram for Shift Mechanism	40
D. Troubleshooting Shift Problems.....	41
E. Transmission Dipstick Modification.....	43
F. Shift Solenoid Indicator Lights.....	45
G. Cord 810-812 Bearing Interchange Data	46
H. Gear Case Interlock Assembly - Cord 810-812	47
I. Cord 810-812 Cross Shift Lever Assembly	49
J. Cord Transmission Pump Repair.....	50
K. Transmission Pump Repair	53
L. Cord Remote Control Gearshift (National Manual).....	54
M. Illustrated Service Parts List, Bendix Finger Tip Gear Shift.....	57
N. Factory Service Bulletin No. 8 — Cord Driving Unit Control Assembly	58